

# PP-8802 Jumper Setting

## ※ SOFTWARE SWITCH 1:

There is no hardware Dip Switch for PP8802 Series.

SWITCH 1		FUNCTION
1	2	Baud Rate
OFF	OFF	115200
OFF	ON	19200
ON	OFF	9600
ON	ON	38400
3		Printable width
OFF		512dots
ON		576dots
4		Paper width
OFF		80mm
ON		58mm
5		Interface select
OFF		USB
ON		Serial
6		USB Class
OFF		Printer Class
ON		Virtual Com
7		Auto cutter
OFF		Enable
ON		Disable
8		Reserve

※ SOFTWARE SWITCH 2:

SWITCH 2	FUNCTION
1	Reserve
2	Cut Paper after Cover Return
OFF	Enable
ON	Disable
3	Raster Bitmap Printing
OFF	Batch Print
ON	Line Print
4	Before Cut Paper
OFF	Normal Cut
ON	Cut and without paper feed
5	Busy condition
OFF	Enable
ON	Disable
6	< CR > Auto Line Feed
OFF	Disable
ON	Enable
7	Parity Check
OFF	NONE
ON	EVEN
8	Handshaking
OFF	DTR/DSR
ON	XON/XOFF

※ SOFTWARE SWITCH 3:

SWITCH 3				FUNCTION
1		2		Print Speed
OFF		OFF		220mm/s
ON		OFF		200mm/s
OFF		ON		180mm/s
ON		ON		150mm/s
3				Thai Font mode
OFF				1 PASS
ON				3 PASS
4				UPOS Write
OFF				Enable
ON				Disable
5	6	7	8	Print Density
OFF	OFF	OFF	OFF	100%
ON	OFF	OFF	OFF	105%
OFF	ON	OFF	OFF	110%
ON	ON	OFF	OFF	115%
OFF	OFF	ON	OFF	120%
ON	OFF	ON	OFF	125%
OFF	ON	ON	OFF	130%
ON	ON	ON	OFF	95%
OFF	OFF	OFF	ON	90%
ON	OFF	OFF	ON	85%
OFF	ON	OFF	ON	80%

※ **SOFTWARE SWITCH 4:**

SWITCH 4		FUNCTION
1		Beep Sound after Cut paper
OFF		Disable
ON		Enable
2	3	Barcode Height Reduction
OFF	OFF	Disable
ON	OFF	Reduce 25%
OFF	ON	Reduce 50%
ON	ON	Reduce 75%
4	5	Line Space Reduction
OFF	OFF	Disable
ON	OFF	Reduce 25%
OFF	ON	Reduce 50%
ON	ON	Reduce 75%
6	7	Line Feed Reduction
OFF	OFF	Disable
ON	OFF	Reduce 25%
OFF	ON	Reduce 50%
ON	ON	Reduce 75%
8		Usb packet
OFF		Zero packet
ON		NAK packet

※ **JP3: Use for Firmware download.**

JP3	FUNCTION
Open	Normal Mode
Short	Firmware download mode