

# PP-8806 Jumper Setting

※ SOFTWARE SWITCH 1 :

SWITCH 1		FUNCTION
1	2	Baud Rate
OFF	OFF	115200
OFF	ON	19200
ON	OFF	9600
ON	ON	38400
3		USB Class
OFF		Printer Class
ON		Virtual Com
4	5	Onboard Interface
OFF	OFF	USB
OFF	ON	Serial
ON	OFF	Ethernet
6		printable width
OFF		512dots
ON		576dots
7		Paper width
OFF		80mm
ON		58mm
8		Auto cutter
OFF		Enable
ON		Disable

※ SOFTWARE SWITCH 2 :

SWITCH 2	FUNCTION
<b>1</b>	<b>The New Font For “V” and “0”</b>
<b>OFF</b>	<b>Use Original Font</b>
ON	Use New Font
<b>2</b>	<b>Cut Paper after Cover Return</b>
<b>OFF</b>	<b>Enable</b>
ON	Disable
<b>3</b>	<b>Raster Bitmap Printing</b>
<b>OFF</b>	<b>Batch Print</b>
ON	Line Print
<b>4</b>	<b>Before Cut Paper</b>
<b>OFF</b>	<b>Normal Cut</b>
ON	Cut and without paper feed
<b>5</b>	<b>Busy condition</b>
<b>OFF</b>	<b>Enable</b>
ON	Disable
<b>6</b>	<b>&lt; CR &gt; Auto Line Feed</b>
<b>OFF</b>	<b>Disable</b>
ON	Enable
<b>7</b>	<b>Parity Check</b>
<b>OFF</b>	<b>NONE</b>
ON	EVEN
<b>8</b>	<b>Handshaking</b>
<b>OFF</b>	<b>DTR/DSR</b>
ON	XON/XOFF

※ SOFTWARE SWITCH 3 :

SWITCH 3				FUNCTION
1	2			
OFF	OFF	220mm/s		
ON	OFF	200mm/s		
OFF	ON	180mm/s		
ON	ON	150mm/s		
3				Thai Font mode
OFF				1 PASS
ON				3 PASS
4				UPOS Write
OFF				Enable
ON				Disable
5	6	7	8	Print Density
OFF	OFF	OFF	OFF	100%
ON	OFF	OFF	OFF	105%
OFF	ON	OFF	OFF	110%
ON	ON	OFF	OFF	115%
OFF	OFF	ON	OFF	120%
ON	OFF	ON	OFF	125%
OFF	ON	ON	OFF	130%
ON	ON	ON	OFF	95%
OFF	OFF	OFF	ON	90%
ON	OFF	OFF	ON	85%
OFF	ON	OFF	ON	80%
ON	ON	OFF	ON	75%
OFF	OFF	ON	ON	70%
ON	OFF	ON	ON	140%
OFF	ON	ON	ON	150%

※ SOFTWARE SWITCH 4 :

SWITCH 4		FUNCTION
1		Beep Sound after Cut paper
OFF		Disable
ON		Enable
2	3	Barcode Height Reduction
OFF	OFF	Disable
ON	OFF	Reduce 25%
OFF	ON	Reduce 50%
ON	ON	Reduce 75%
4	5	Line Space Reduction
OFF	OFF	Disable
ON	OFF	Reduce 25%
OFF	ON	Reduce 50%
ON	ON	Reduce 75%
6	7	Line Feed Reduction
OFF	OFF	Disable
ON	OFF	Reduce 25%
OFF	ON	Reduce 50%
ON	ON	Reduce 75%
8		Usb packet
OFF		Zero packet
ON		NAK packet

**※ SOFTWARE SWITCH 5 :**

<b>SWITCH 5</b>	<b>FUNCTION</b>
<b>1</b>	<b>Printer PID</b>
<b>OFF</b>	<b>Default</b>
ON	For PP8800
<b>2</b>	<b>Printer PID</b>
<b>OFF</b>	<b>Default</b>
ON	For PP8803
<b>3</b>	<b>Reserve</b>
OFF	
ON	
<b>4</b>	<b>The Beep Sound For “Paper Near End”</b>
<b>OFF</b>	<b>Enable</b>
ON	Disable
<b>5</b>	<b>The Beep Sound For “Paper Out”</b>
<b>OFF</b>	<b>Enable</b>
ON	Disable
<b>6</b>	<b>Reserve</b>
OFF	
ON	
<b>7</b>	<b>Reserve</b>
OFF	
ON	
<b>8</b>	<b>Reserve</b>
OFF	
ON	

## ※ JP3、JP5 : Use for Renesas Firmware download

JP3	FUNCTION
Open	Normal Mode
Short	Renesas Firmware download mode
JP5	FUNCTION
Open	Renesas
Short	ATMEL

## ※JP5、JP7 : Use for ATMEL download

JP5	FUNCTION
Open	Renesas
Short	ATMEL
JP7	FUNCTION
Open	Normal Mode
Short	ATMEL download mode

## ※ JP4 : Use for Mac address download

JP4	FUNCTION
Open	Normal Mode
Short	Mac download mode