

TX-4700 JUMPER SETTING

- **CR_PWR2 : Cash Drawer Power 12V**
Pin 3-4 Short : Power 12V Enable
Pin 3-4 Open : Power 12V Disable
- **JP1 : CMOS Select**
Pin 1-2 Short : Normal
Pin 2-3 Short : Clear CMOS
- **JP2 : For CR open/close status port selection**
Pin 1-3 、 2-4 Short: For COM1
Pin 3-5 、 4-6 Short : For COM5
- **JP4 : VGA2 12V DC SUPPLY SELECT FOR CRT**
Open VGA DSUB Pin 9 =Not Connect
Close : VGA DSUB Pin 9 =12V
- **JP6 : COM3/COM4 12V DC SUPPLY SELECT**
Pin 1-3 Short : COM3 Pin1 connected to 12V
Pin 3-5 Short : COM3 Pin1 connected to DCD
Pin 2-4 Short : COM4 Pin1 connected to 12V
Pin 4-6 Short : COM4 Pin1 connected to DCD
- **JP7 : COM1/COM2 12V DC SUPPLY SELECT**
Pin 1-3 Short : COM1 Pin1 connected to 12V
Pin 3-5 Short : COM1 Pin1 connected to DCD
Pin 2-4 Short : COM2 Pin1 connected to 12V
Pin 4-6 Short : COM2 Pin1 connected to DCD
- **COM1~COM4 : +5V through BIOS ; VGA +12V through BIOS**
Press ESC to access Advanced/ Miscellaneous Configuration
VGA DSUB 12V : Disabled
COM1 DB9 5V : Disabled
COM2 DB9 5V : Disabled
COM3 DB9 5V : Disabled
COM4 DB9 5V : Disabled

