

HS-2410A-M Series Printer Jumper Setting● **DIP SWITCH 1 :**

SWITCH 1		FUNCTION
1	2	Baud Rate
OFF	OFF	
OFF	ON	
ON	OFF	
ON	ON	USB CDC
3		
OFF		
ON		
4		
OFF		
ON		
5		Busy condition
OFF		Enable
ON		Disable
6		
OFF		
ON		
7		
OFF		
ON		
8		
OFF		
ON		

● SOFTWARE SWITCH 2 :

SWITCH 2		FUNCTION
1		Software Switch Selection
OFF		Set Hardware Switch 1 Valid
ON		Set Hardware Switch 1 Invalid (Software switch 1 will valid instead of hardware switch 1)
2	3	Print Speed
OFF	OFF	80mm/s
OFF	ON	60mm/s
ON	OFF	100mm/s
ON	ON	50mm/s
4		Paper Feed Back
OFF		Disable
ON		Enable
5		
OFF		
ON		
6		
OFF		
ON		
7		
OFF		
ON		
8		< CR > Auto Line Feed
OFF		Disable
ON		Enable

● SOFTWARE SWITCH 3 :

SWITCH 3			FUNCTION
1			UPOS Write
OFF			Disable
ON			Enable
2			Beep Sound after Cut paper
OFF			Disable
ON			Enable
3	4	5	Print Density
OFF	OFF	OFF	100%
ON	OFF	OFF	110%
OFF	ON	OFF	120%
ON	ON	OFF	130%
6			USB condition
OFF			Zero packet
ON			NAK packet
7			Thai Font mode
OFF			1 PASS
ON			3 PASS
8			Cover Open Message
OFF			Disable
ON			Enable

● **SOFTWARE SWITCH 4 :**

SWITCH 4		FUNCTION
1		
OFF		
ON		
2	3	Barcode Height Reduction
OFF	OFF	Disable
ON	OFF	Reduce 25%
OFF	ON	Reduce 50%
ON	ON	Reduce 75%
4	5	Line Space Reduction
OFF	OFF	Disable
ON	OFF	Reduce 25%
OFF	ON	Reduce 50%
ON	ON	Reduce 75%
6	7	Line Feed Reduction
OFF	OFF	Disable
ON	OFF	Reduce 25%
OFF	ON	Reduce 50%
ON	ON	Reduce 75%
8		
OFF		
ON		

⊗ **JP4: Use for Firmware download.**

JP4	FUNCTION
Open	Normal Mode
Short	Firmware download mode